


# How to remove the pedestal base from Panasonic TX-32LWD500A and TX-27LWD500A LCD integrated Digital Televisions.

## 27" LCD

### 1. Unscrew the bolts from the base.

\*Before putting the LCD face down on the table, put a soft cotton cloth on the surface of the table to protect the LCD from scraping.

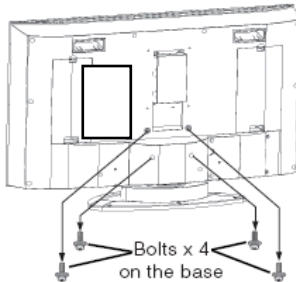


\*Remove the four bolts from the base of the LCD as shown in the illustration.

## 32" LCD

### 1. Unscrew the bolts from the base.

\*Before putting the LCD face down on the table, put a soft cotton cloth on the surface of the table to protect the LCD from scraping.

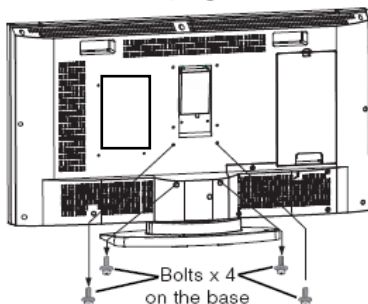

\*Remove the four bolts from the base of the LCD as shown in the illustration.

### Additional notes:

- 1) Panasonic Australia currently does NOT supply wall mounting brackets for these models.
- 2) When using third party wall brackets, Panasonic Australia recommends that the wall mounting bracket has the ability to provide a 35mm clearance between the back of the LCD (major surface area) and wall to allow for the LCD's irregular back contour and assist in convection air flow cooling.
- 3) Wall mounting should be undertaken by a suitably qualified person.
- 4) Panasonic Australia's warranty only applies to LCDs purchased in Australia and does not cover damage, malfunction or failure resulting from incorrect installation nor does it extend to any costs associated with installation, de-installation or re-installation of the LCD. Panasonic Australia provides no warranty of any kind, expressed or implied, in respect of third party wall mounting brackets or installation and excludes all liability in respect of third party products or service.

Date: 6 January 2006